

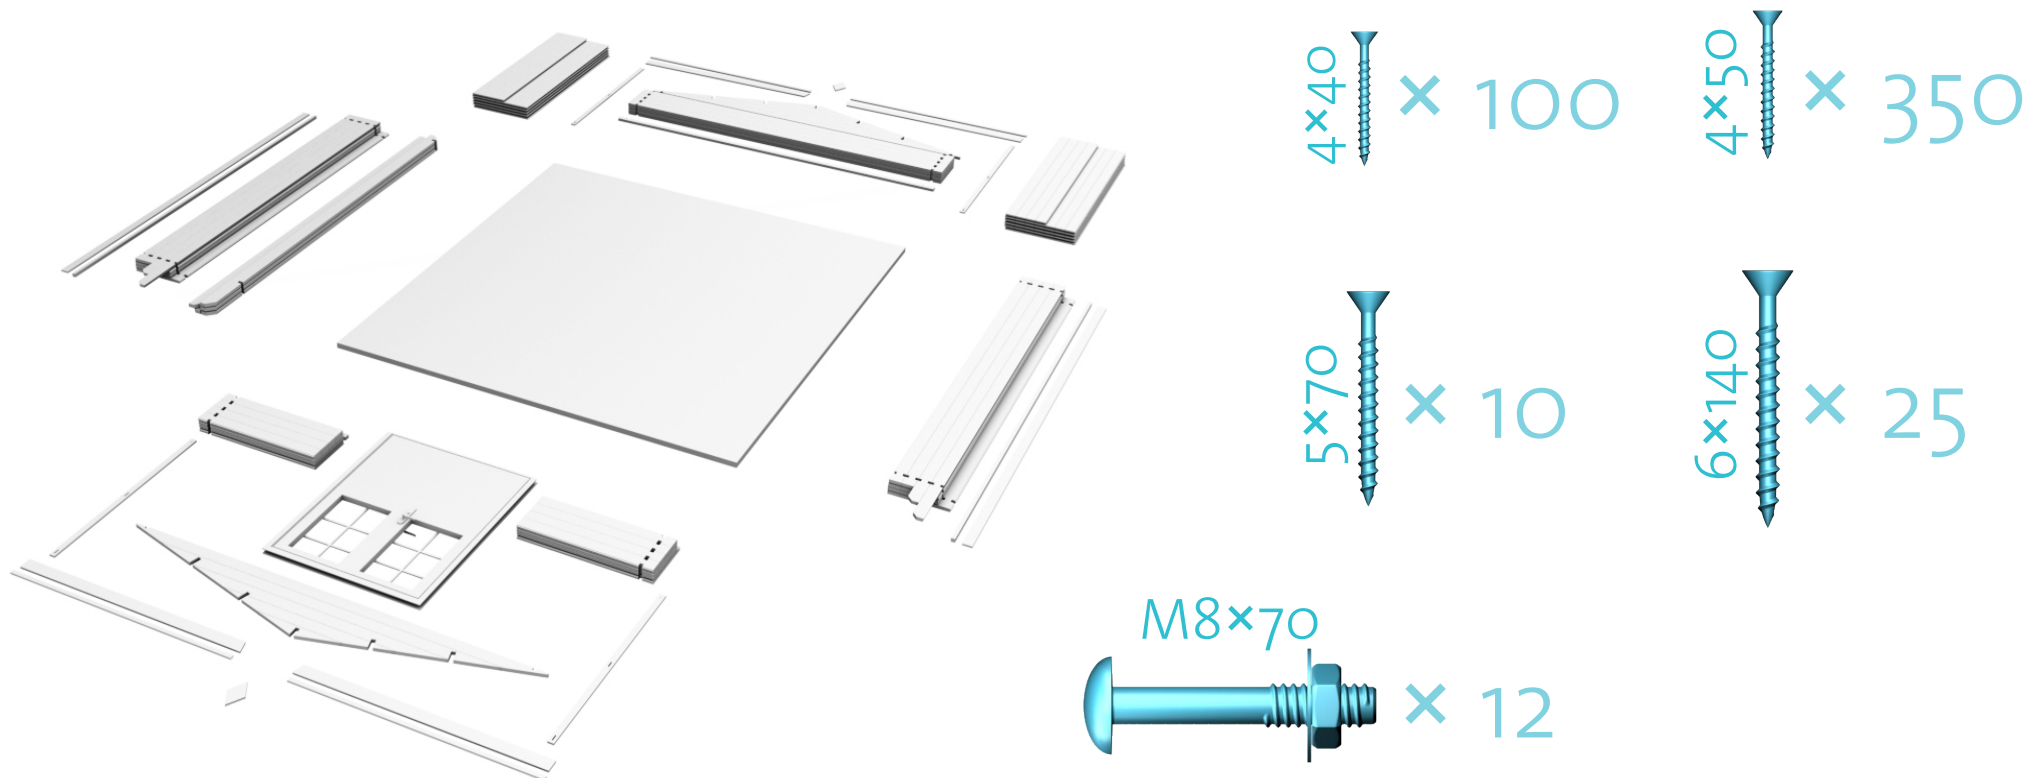


PREPARE THE GROUND, UNWRAP THE PACKAGE,  
LAY OUT THE COMPONENTS, FIND THE TOOLS.




# OSTO DRESDEN 34

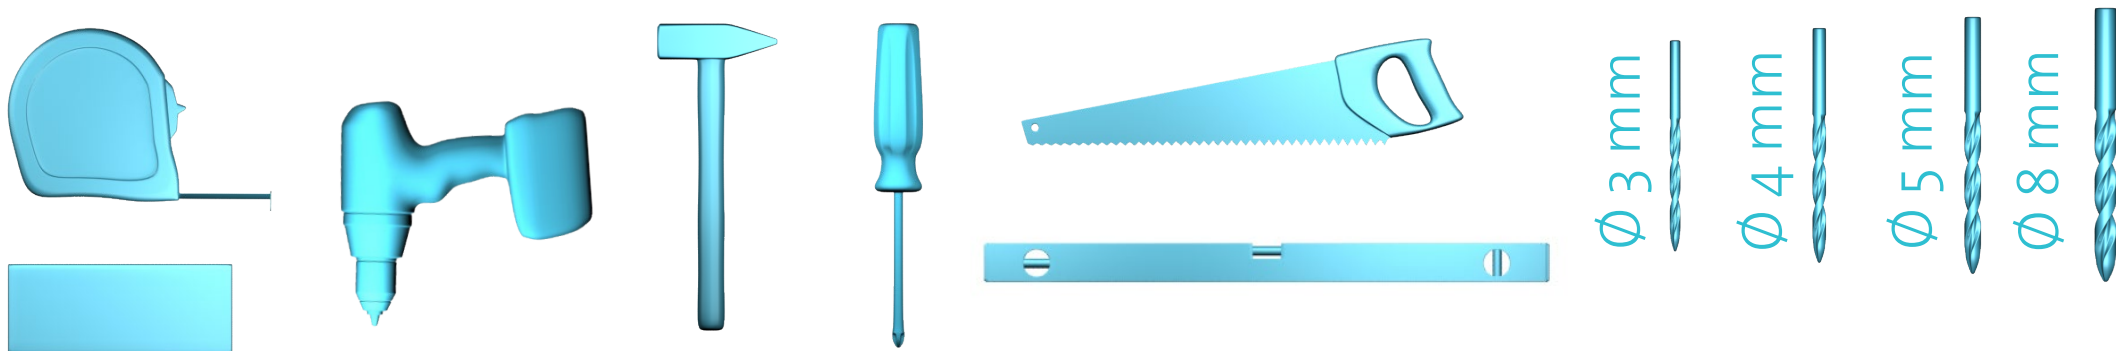

LAY OUT THE **BOTTOM** LOGS  
AND **SQUARE** IT BY MEASURING  
FROM CORNER TO **CORNER**.

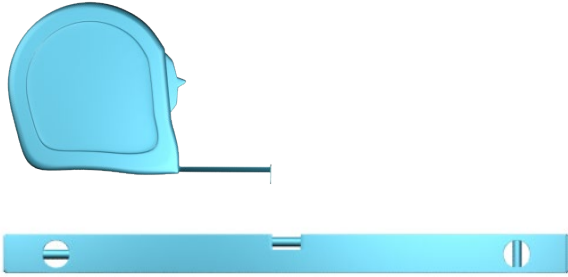

# OSTO DRESDEN 34

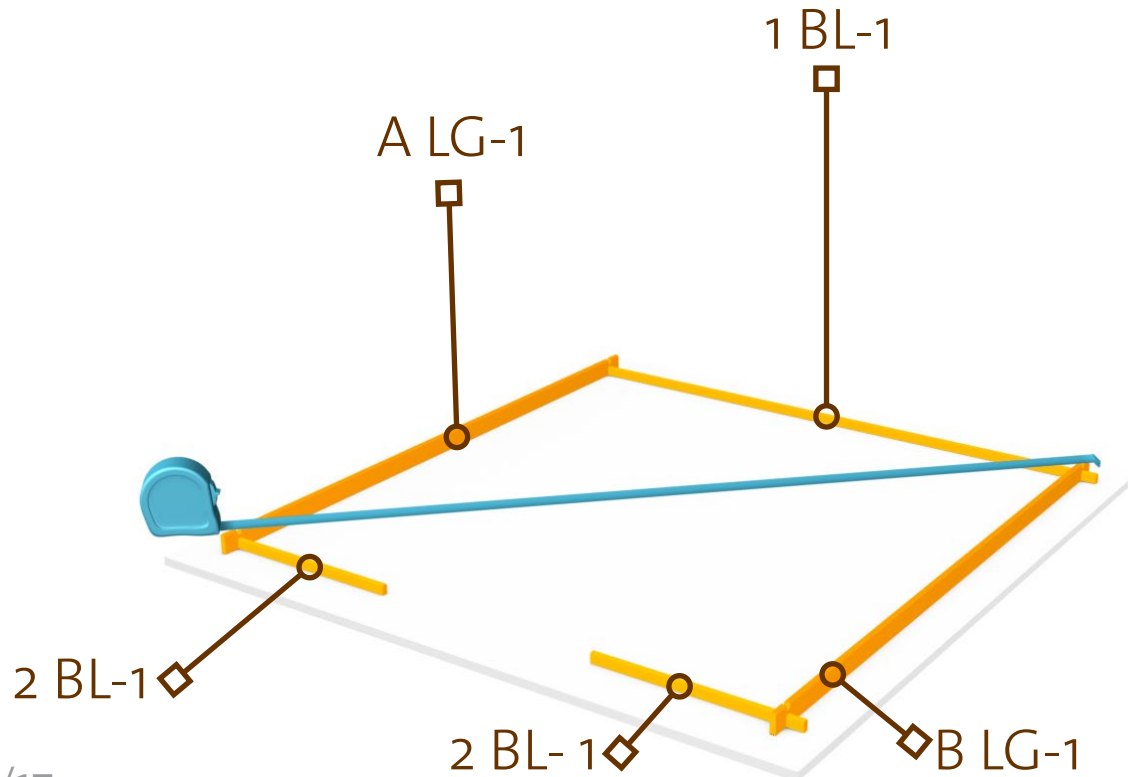
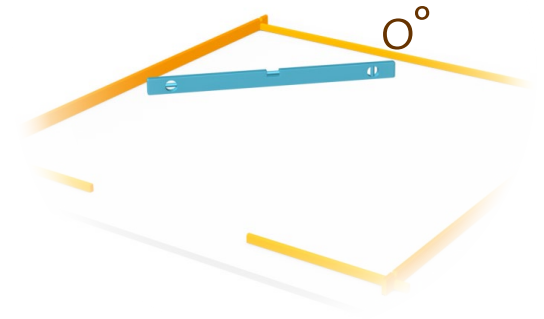
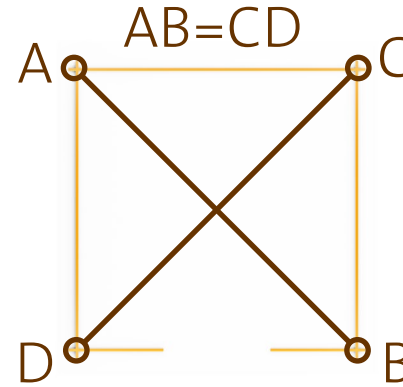


MAKE **SURE** THAT THE BOTTOM LOGS  
ARE INSTALLED ON A **LEVEL** SURFACE.  
CHECKING ALL DIRECTIONS,  
INCLUDING **CORNER** TO CORNER. **2%**

ATTACH THE LOGS  
WITH SCREWS.



5x70 × 4  
Ø 4 mm

OSTO DRESDEN 34

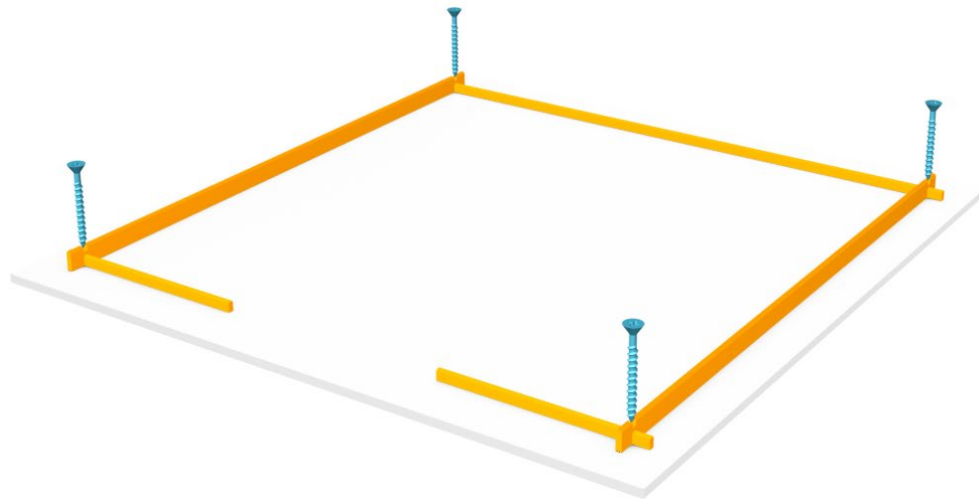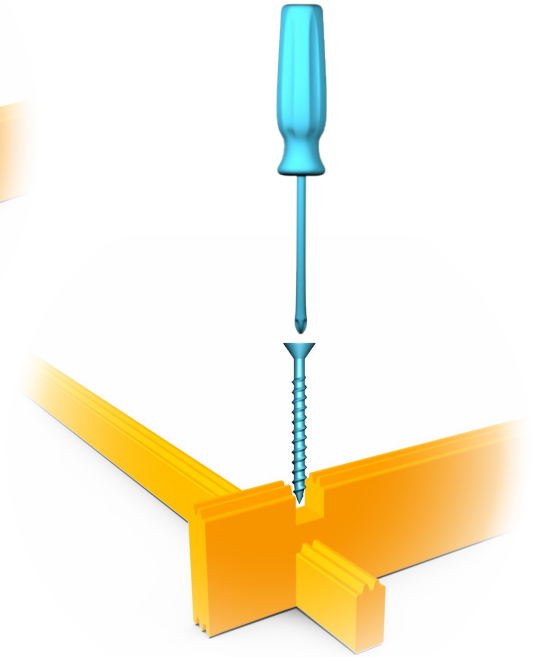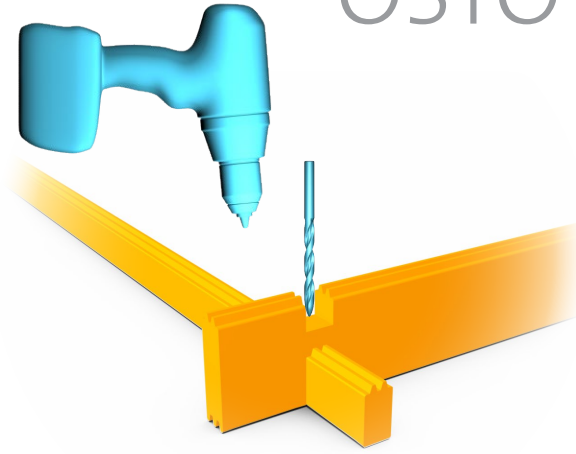


ATTACH THE FIRST ROW OF  
**WALL LOGS** INTO THE BOTTOM  
LOGS WITH **SCREWS**.

$5 \times 70 \times 4$   $6 \times 140 \times 5$   
 $\varnothing 4 \text{ mm}$   $\varnothing 5 \text{ mm}$

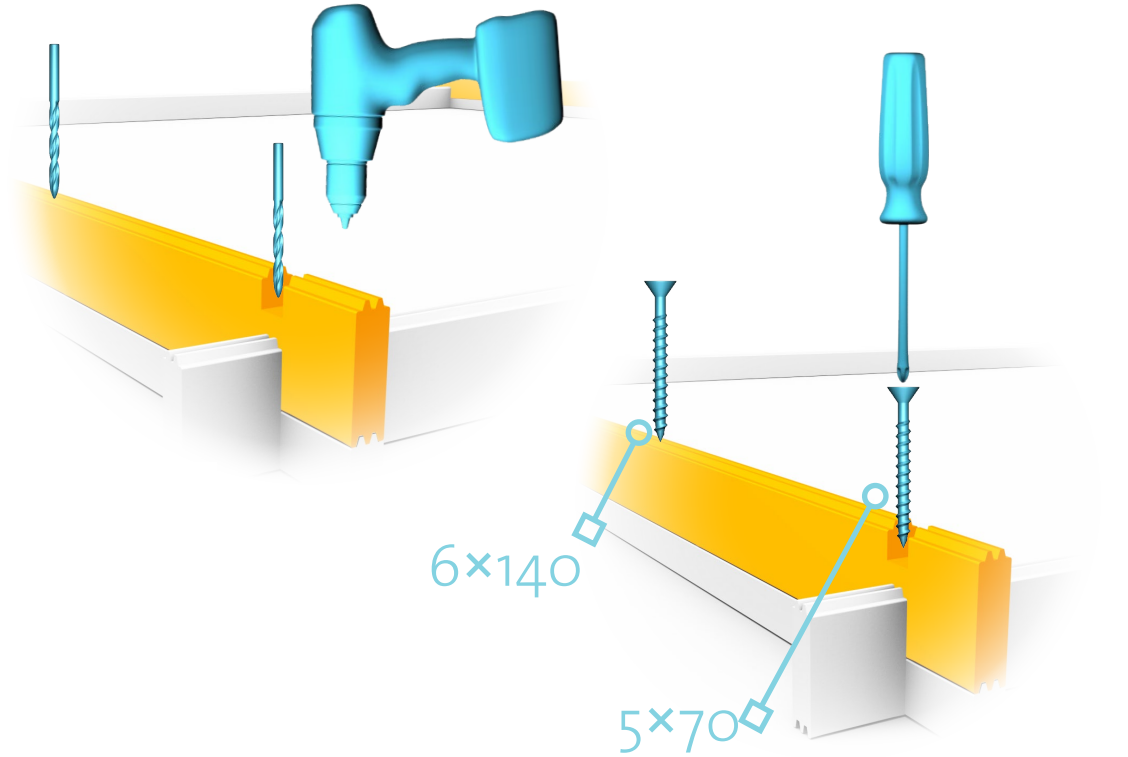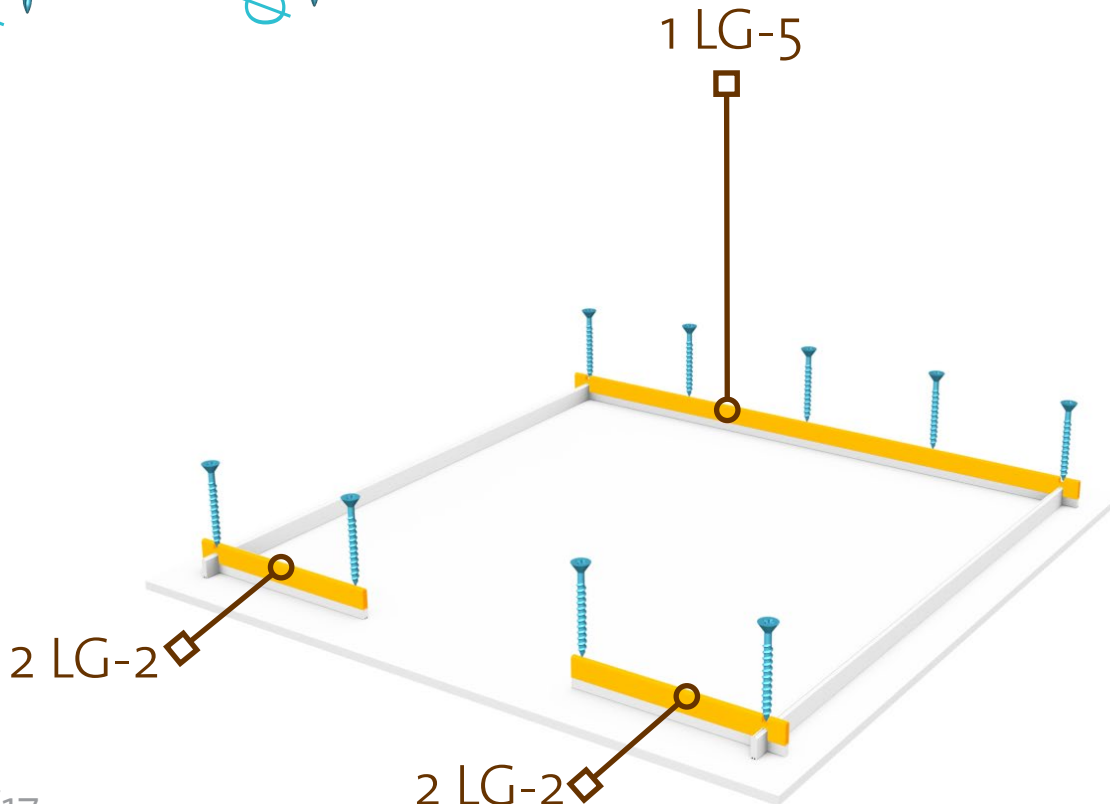



AFTER PLACING 3-4 ROWS OF WALL LOGS, TAP EACH WALL LOG IN PLACE USING A HAMMER AND THE HITBLOCK PROVIDED, TO TIGHTEN THE LOGS.

OSTO DRESDEN 34

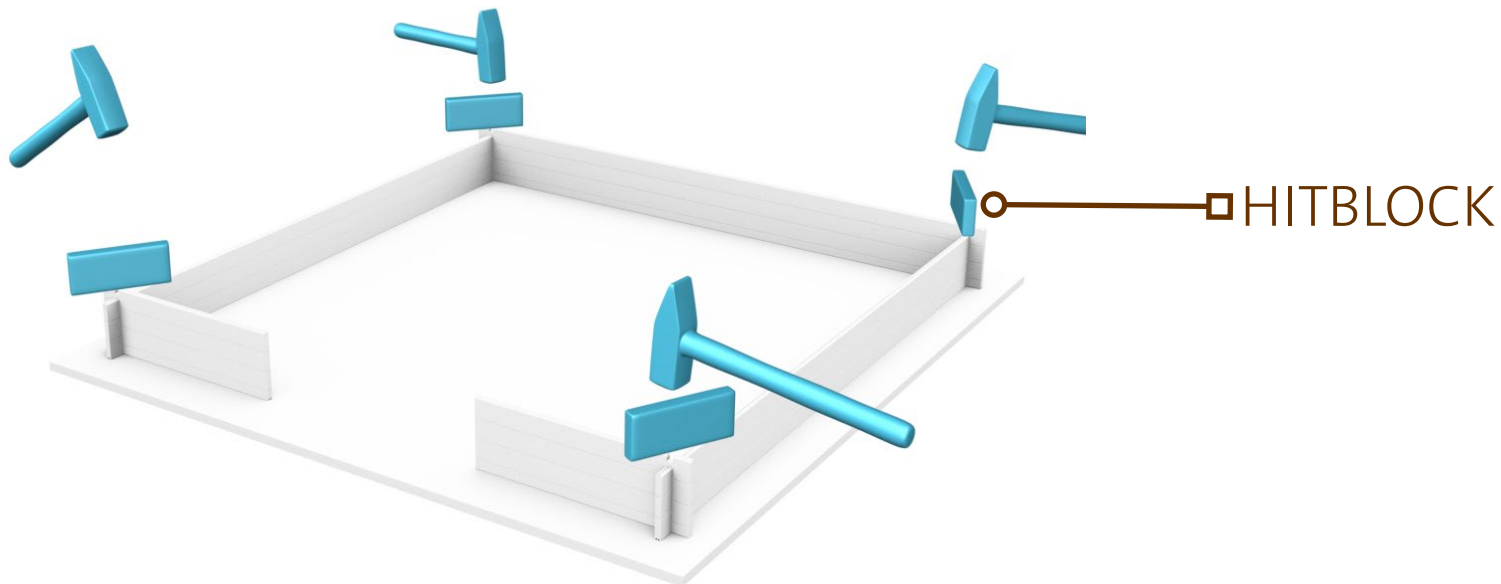


SLIDE THE DOOR IN,  
ATTACH THE HANDLE.

OSTO DRESDEN 34

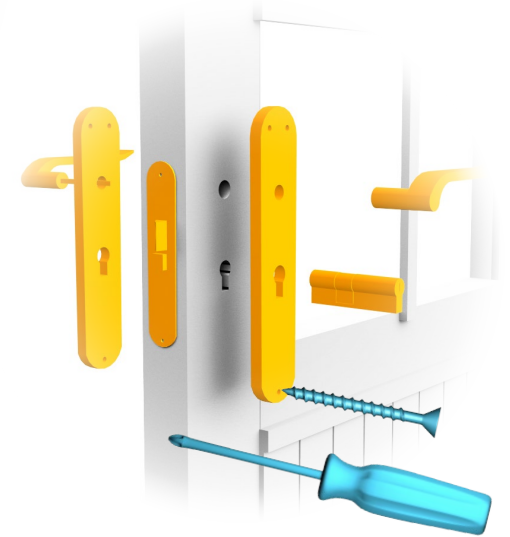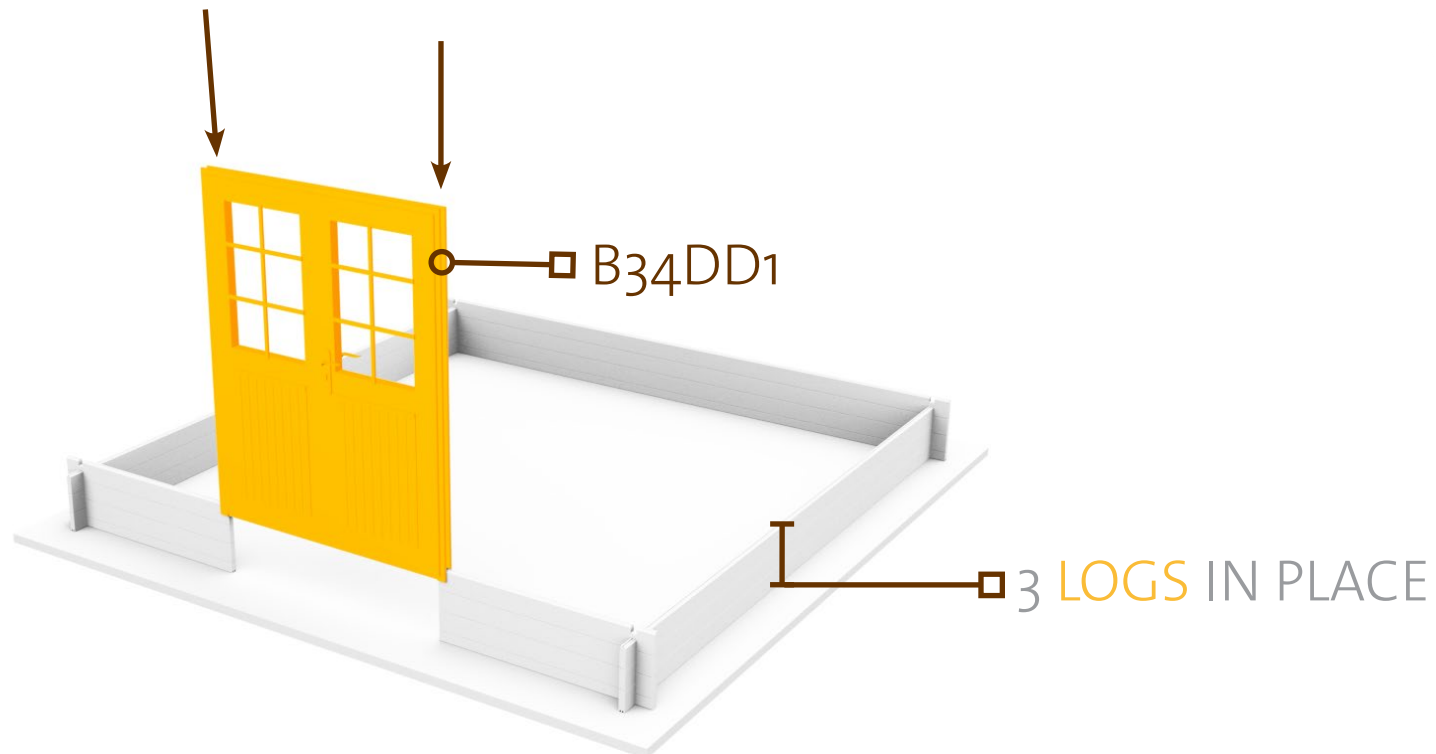

DON`T FORGET TO  
**TIGHTEN** THE LOGS AFTER  
EVERY 3-4 ROWS.


OSTO DRESDEN 34

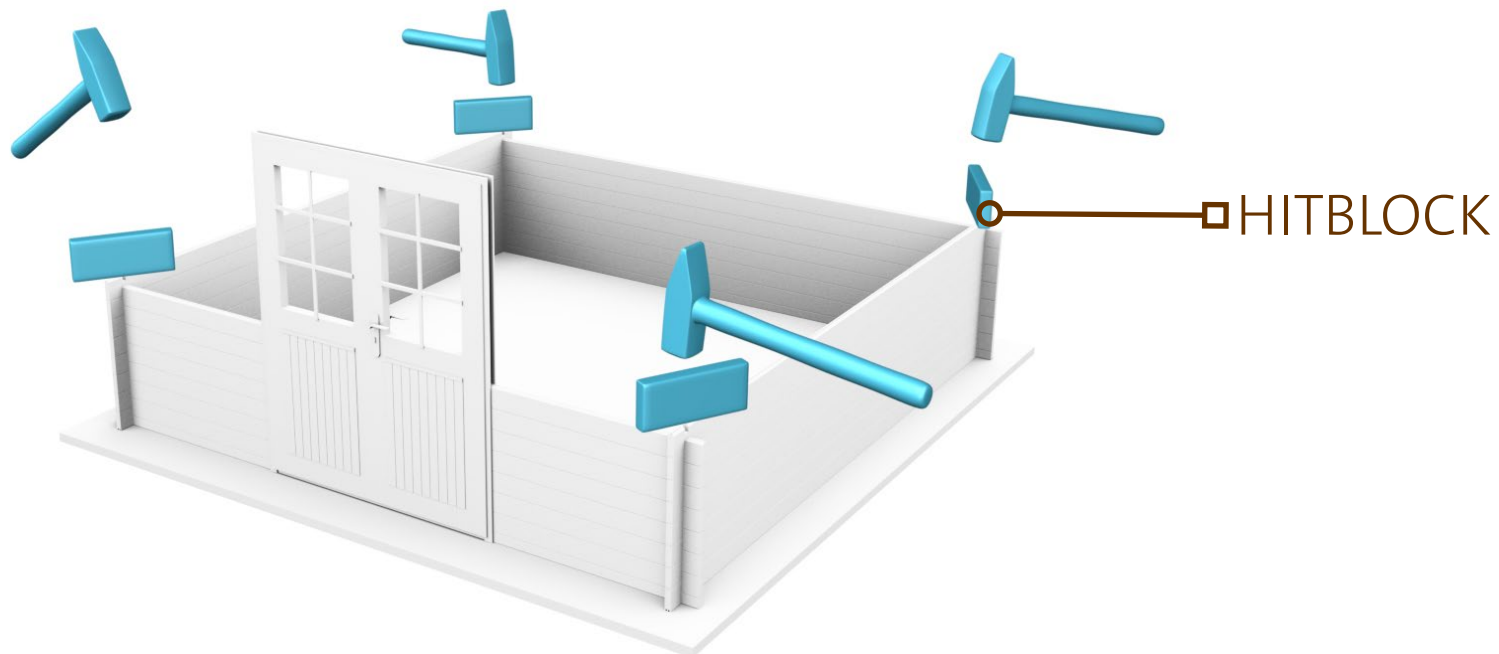

INSTALL THE GABLES WITH LONG SCREWS  
TO THE WALL LOGS ON THE FRONT AND  
REAR WALLS.

6x140  
× 4



Ø 5 mm

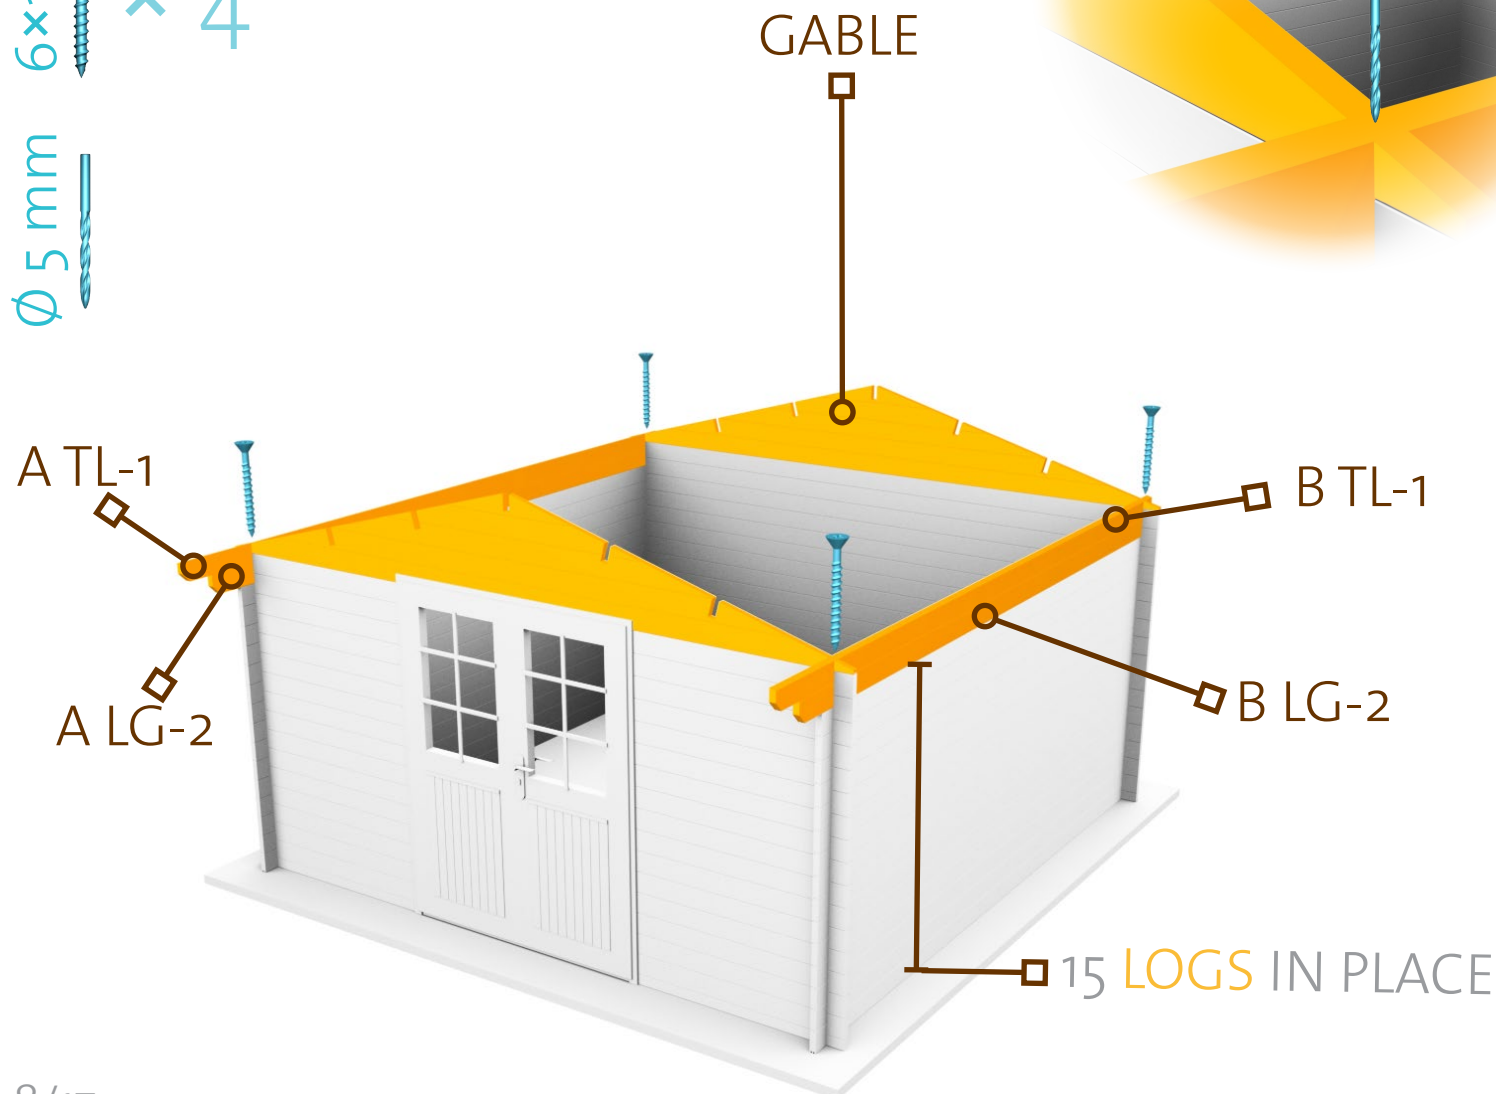

OSTO DRESDEN 34


INSTALL THE **ROOF** PURLINS AND  
**ATTACH** THEM WITH SCREWS.

6x140  
× 10  
Ø 5 mm

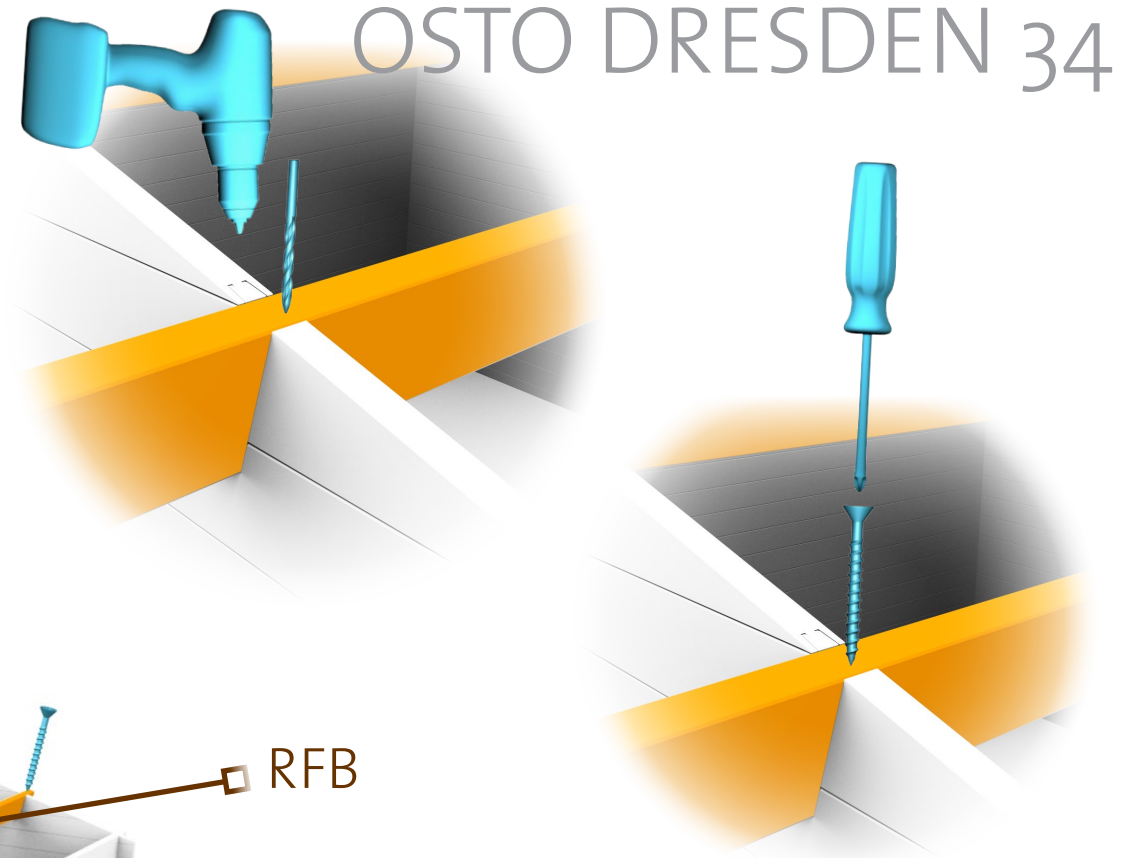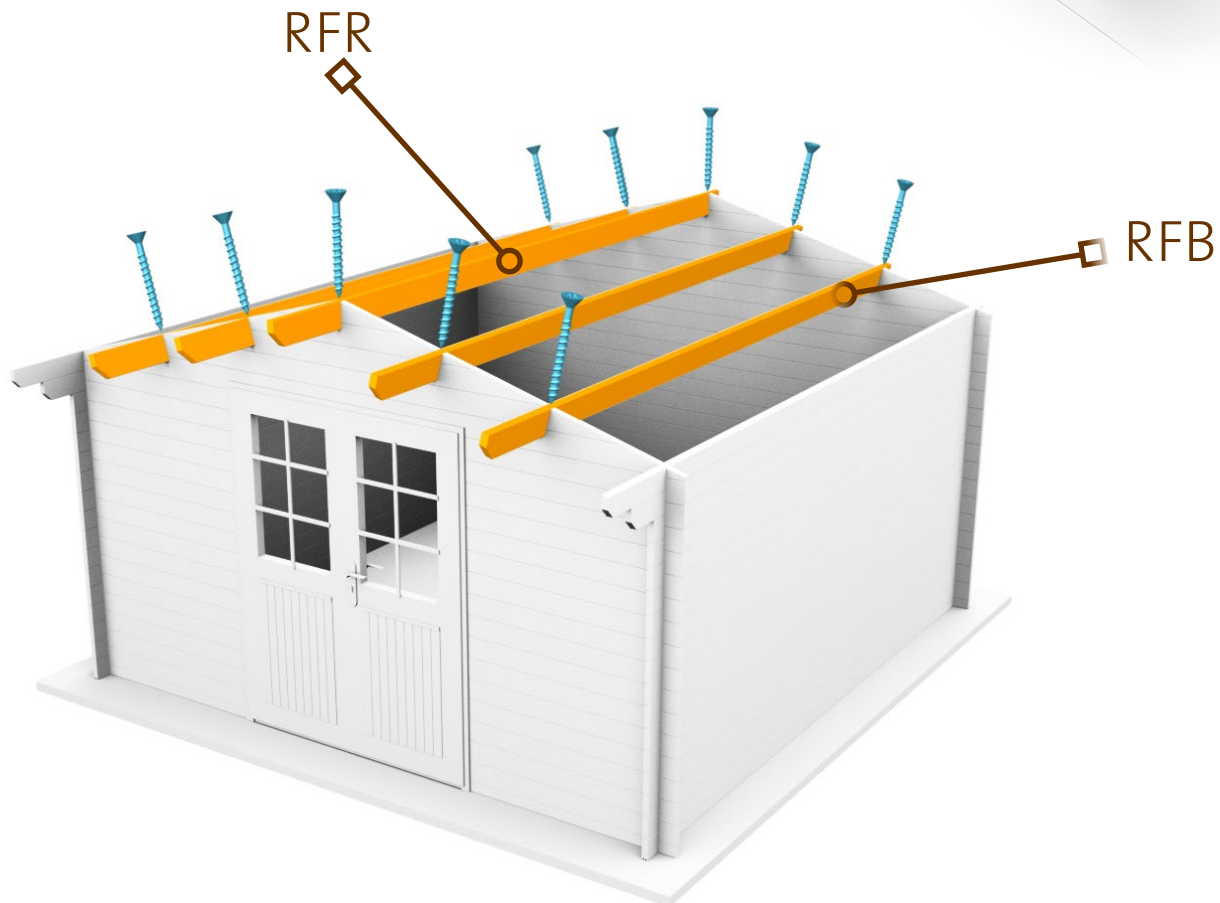



PLACE THE FIRST **ROOFBOARD** FLUSH WITH THE **END** OF THE PURLINS AND ATTACH WITH 8 SCREWS, 4 **INTO** EACH NEXT.

4x50  
× 336

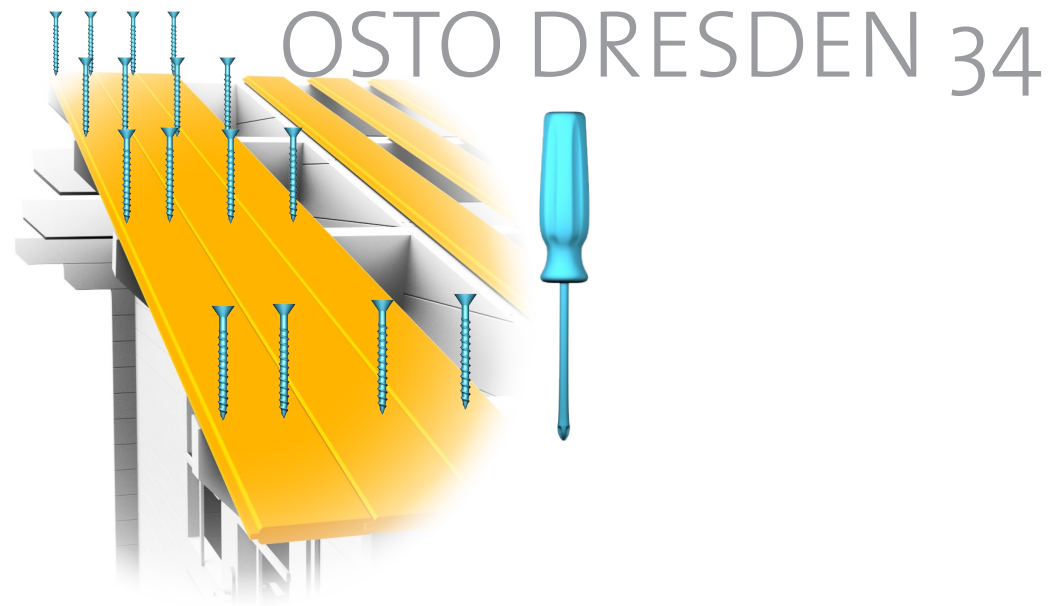

FOR THE FASCIA TRIMS  
INSERT **SCREWS** AFTER  
EVERY 0,5 METERS.

4x40  
× 40

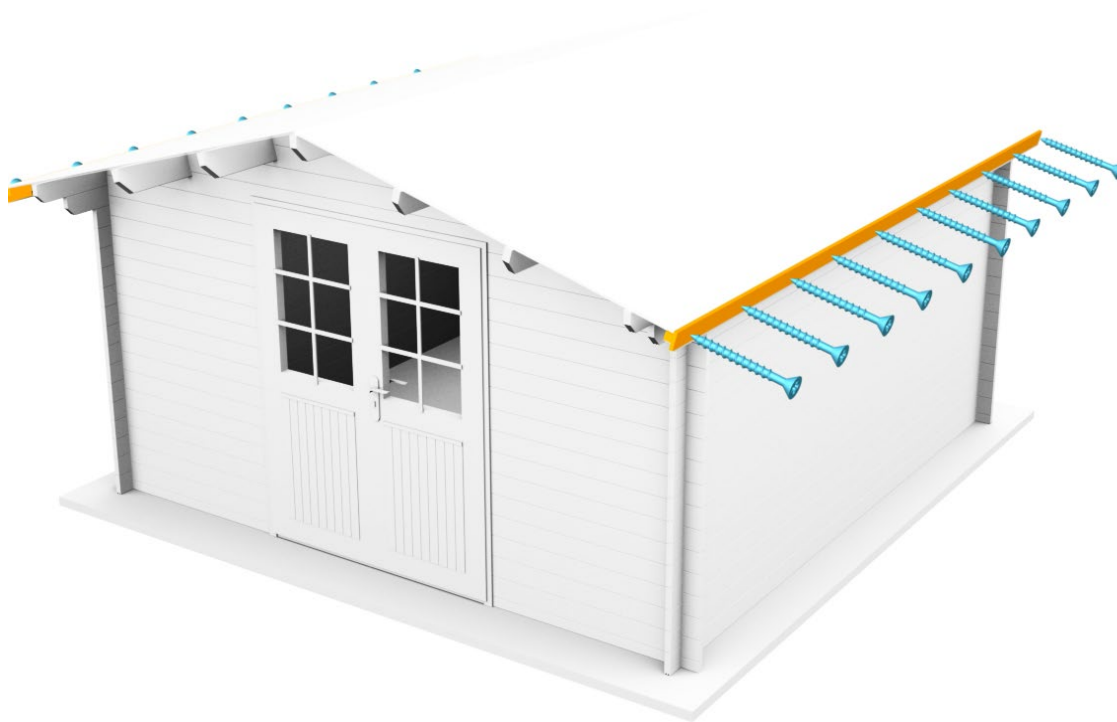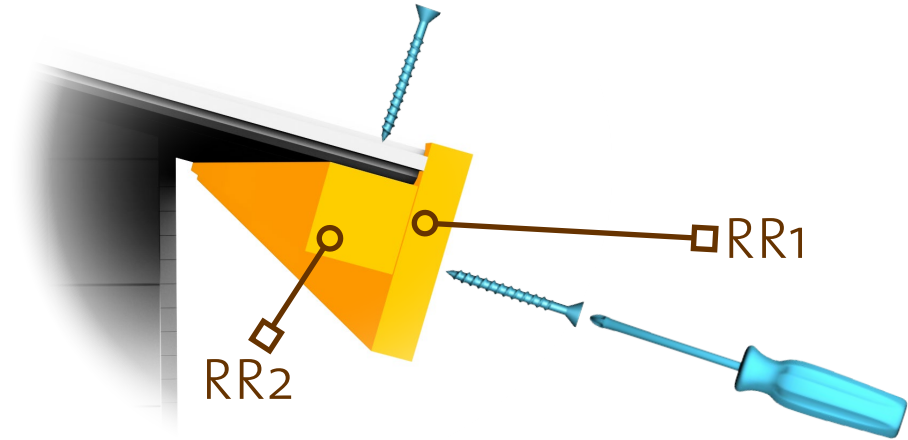


EAVES EDGES GO ON TOP  
OF THE ROOFING\*.

\*(NOT INCLUDED)

4x40

× 40

Ø 3 mm


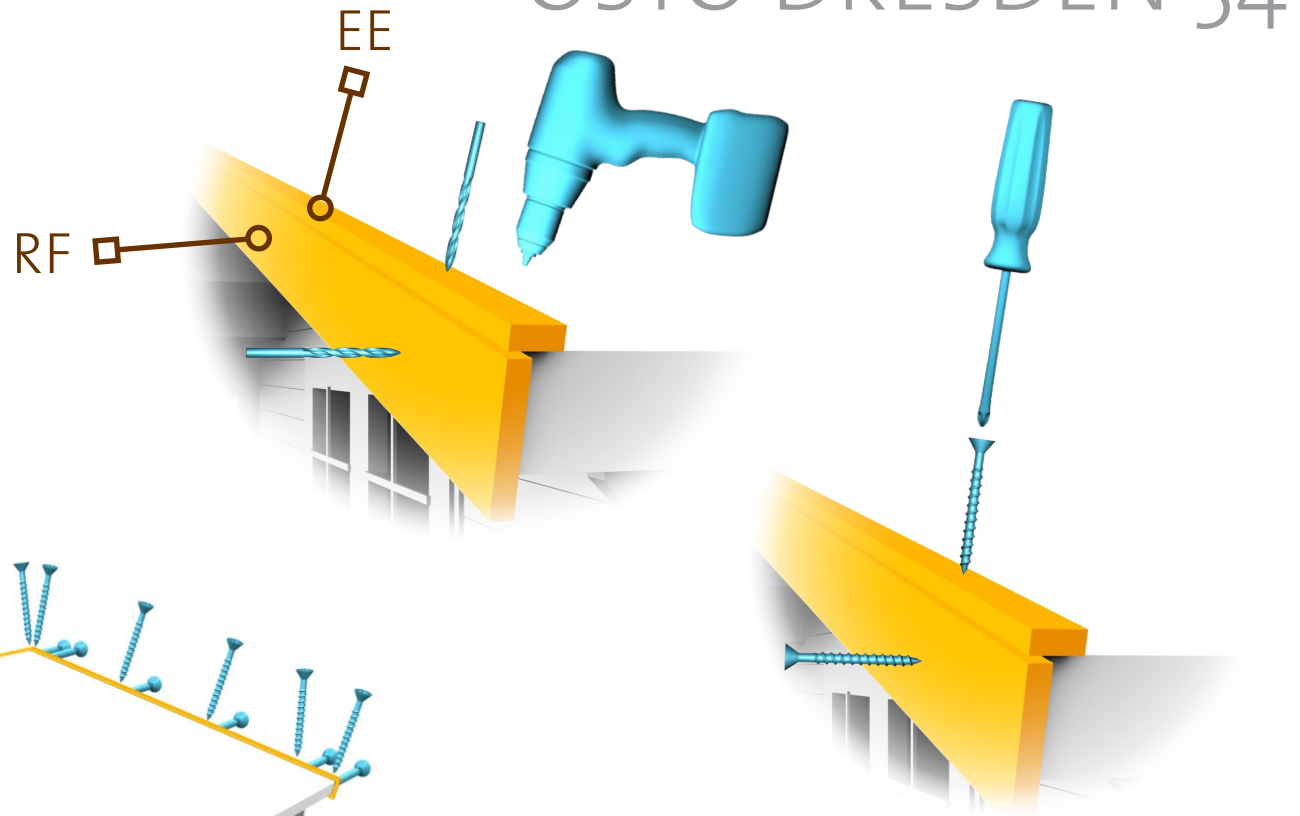


ATTACH ROMB WITH SCREWS.




OSTO DRESDEN 34

4x40  
× 4  
Ø 3 mm

ROMB

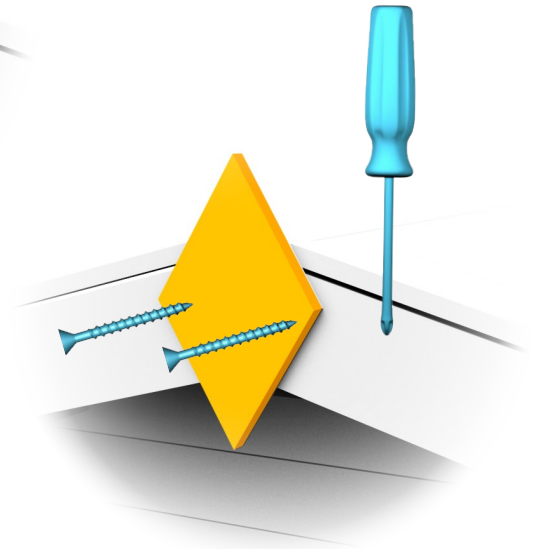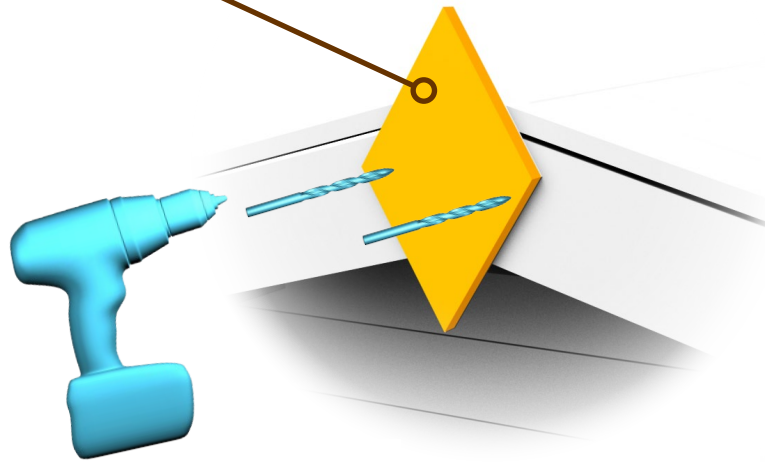


DRILL THROUGH THE WALL, HOLE MUST  
BE AT THE BOTTOM OF THE OVAL,  
ATTACH WITH BOLT.

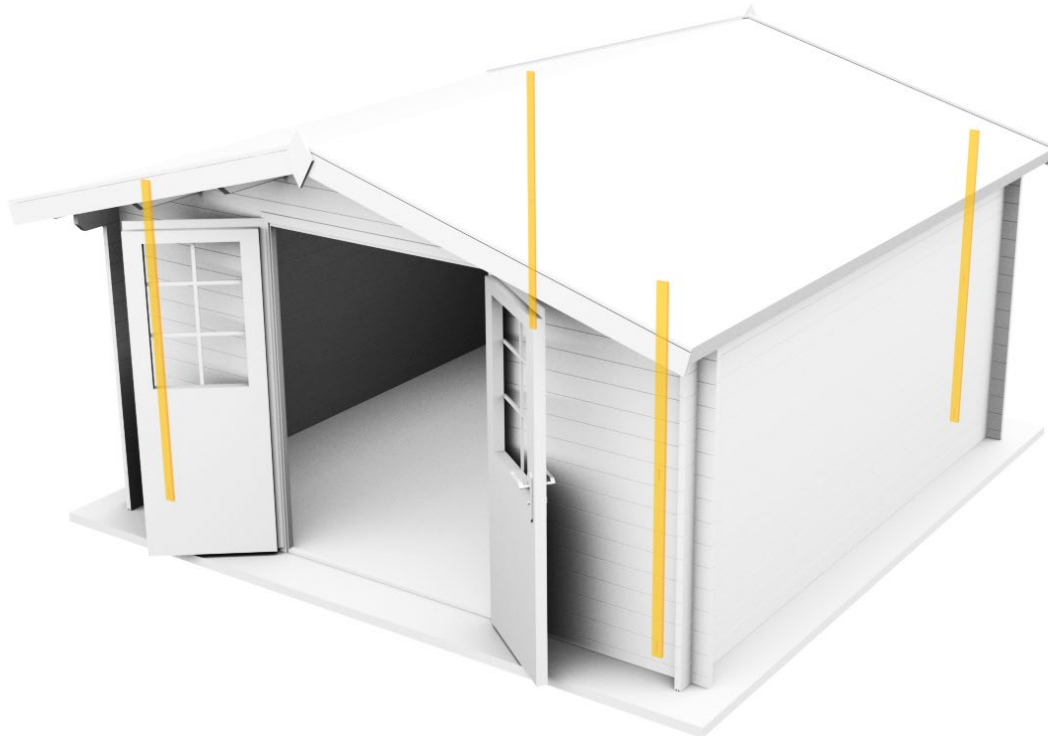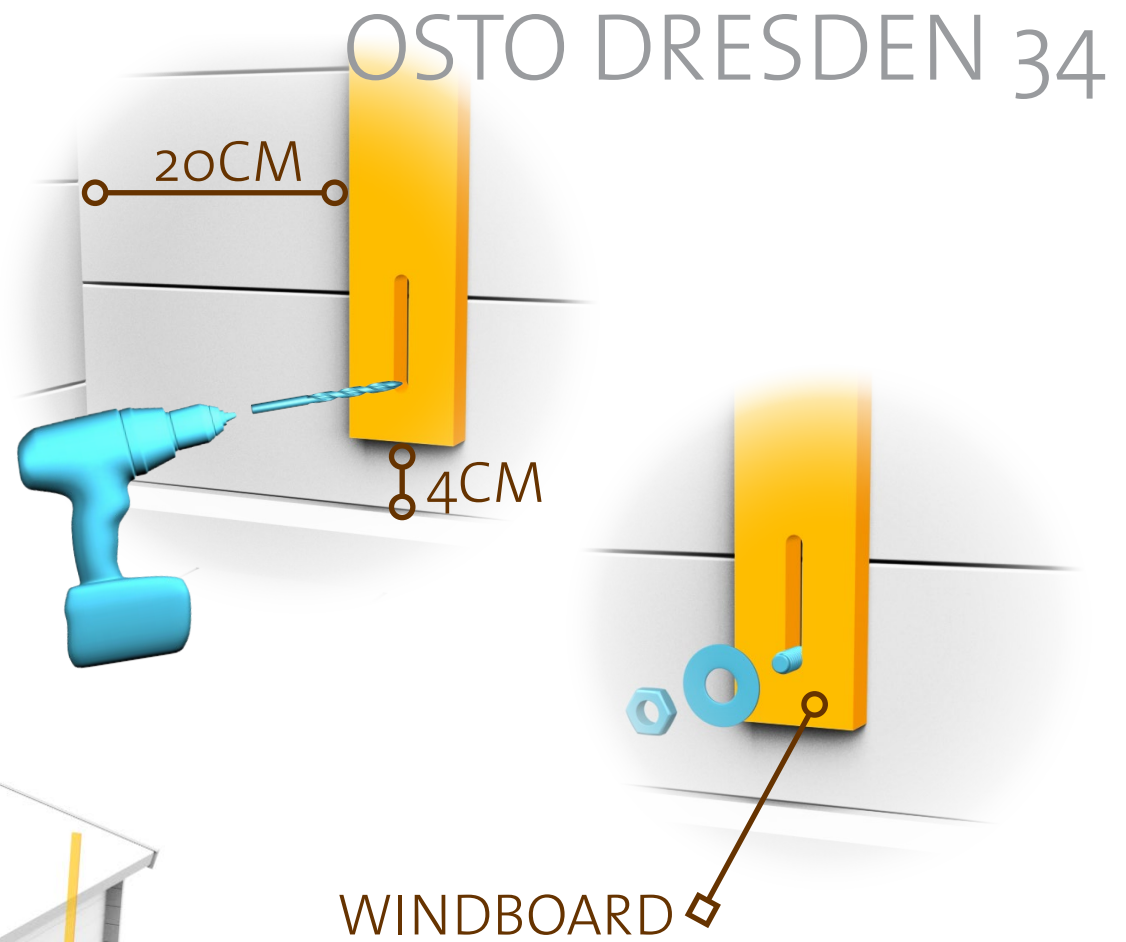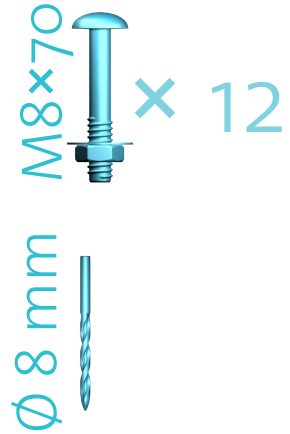


IF DOOR IS TILTED,  
PUSH THE DOOR FRAME SO  
THAT ALL CORNERS ARE  $90^\circ$ .

OSTO DRESDEN 34

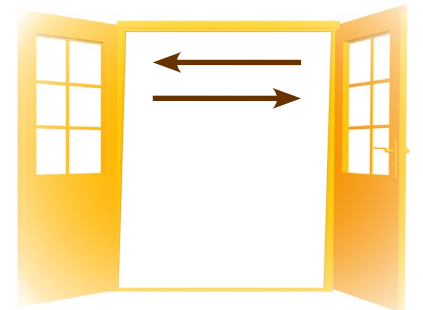

IF **DOORS** ARE IN DIFFERENT HEIGHTS  
OR THERE IS A GAP **BETWEEN** THEM,  
**ADJUST** 3 SCREWS ON DOOR HINGES.

OSTO DRESDEN 34

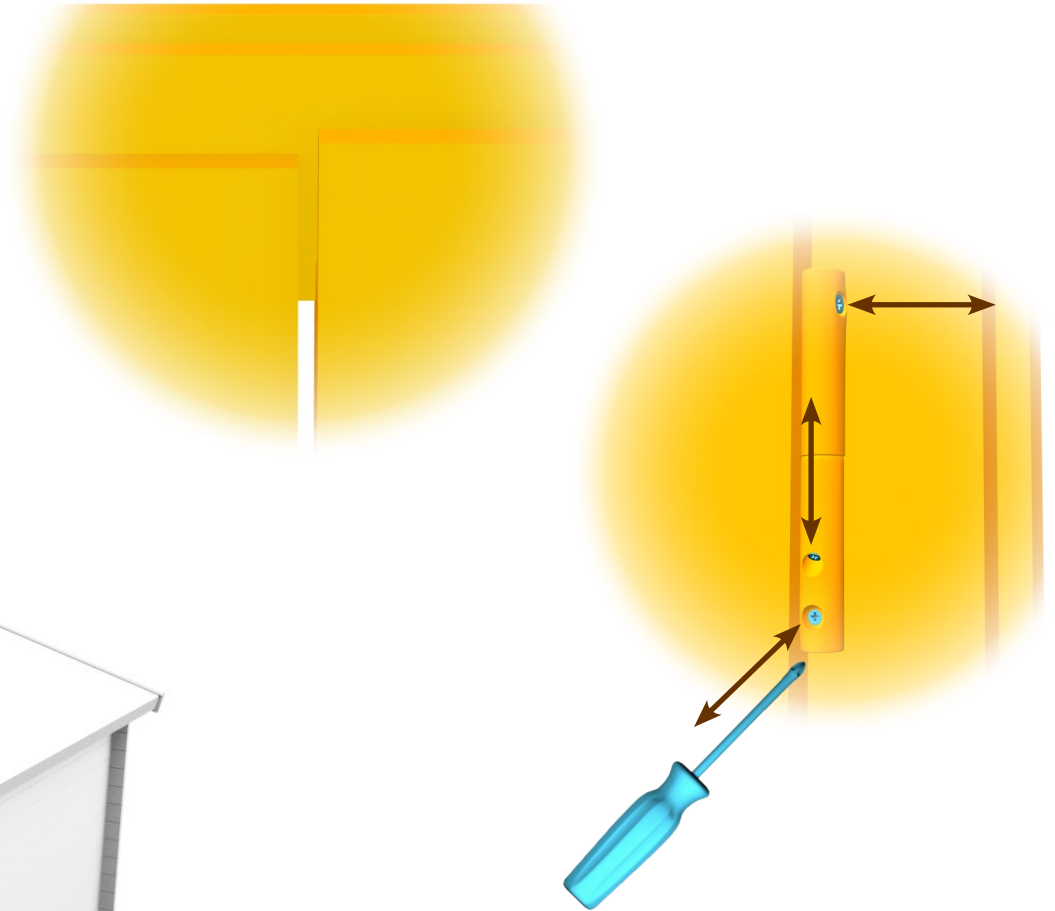

WHEN THE **HOUSE** IS ASSEMBLED, YOU SHOULD **COVER** THE TIMBER WITH **WOOD** PROTECTIVE SEAL, PAINT OR **STAIN** AS SOON AS POSSIBLE TO AVOID DETERIORATION TO THE **WOOD**.

OSTO DRESDEN 34

